


# A G I L

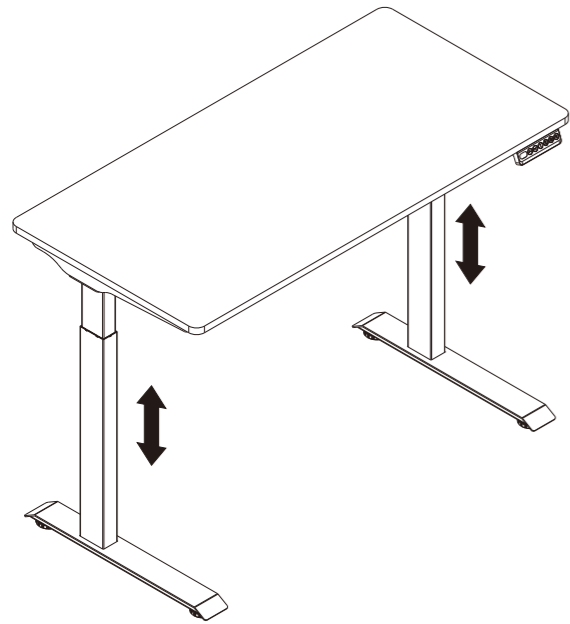


## Technical Data

Column Number	2
Maximum Load	50KG
Max Speed	25mm/s
Input Voltage	100-240V
Lowest Position	730mm
Highest Position	1230mm
Desktop Size	1200mm(length) 600mm(width)
Duty Cycle	Continuous operation for 2 mins at most after pause for 18 mins
Applicable Temperature	0~40°C

## Accessory List


Attention: The drawings below are only for reference which might be slightly different from the actual object, please in kind prevail. Any tools missing or installation problems, please contact the customer service firstly.

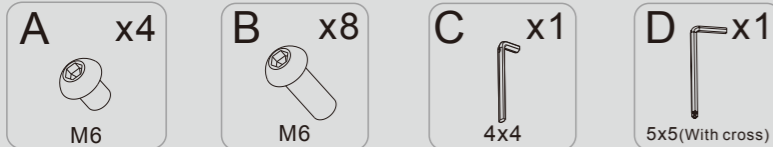

## Part List

No.	Part	Qty	No.	Part	Qty	No.	Part	Qty
①	Tabletop	1	②	Lifting column	2	③	Handset	1
④	Pedestal	2	⑤	Power plug	1	⑥	Adaptor	1
⑦	Cable mounts	4	⑧	Cable	1	⑨	Screw for Handset	3

## Installation Instruction

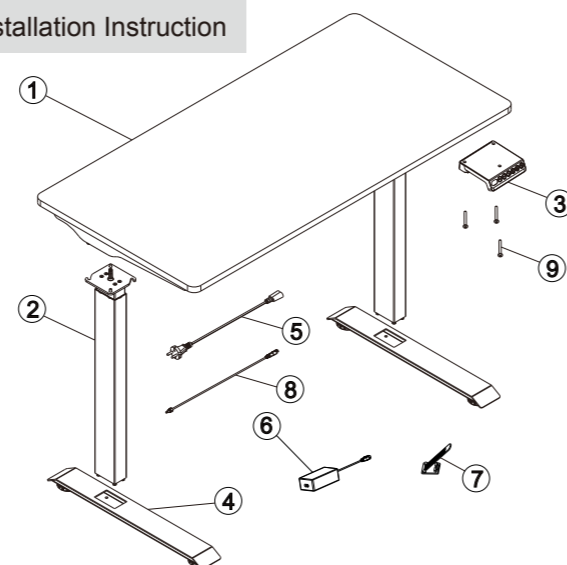

### STEP1 Install the lifting column

**A** x4  
**C** 4x4

Rotate the column after inserting it to the bottom to avoid height difference

longside of the lifting column

Shortside of the desktop

1

2

3

4

Insert

Insert the hexagon head of the column along the wiring trough, the side of the wire head facing the motor

Rotate the column after inserting it, making the screws on the supporting beam into the column slot

Screws

Tighten the screws (A) with 4x4 allen key

Install the lifting column (2) to the tabletop(1), then tighten the screws (A) with allen key (C).

### STEP2 Install the pedestal

**B** x8  
**C** 4x4

4

2

Install the feet (4) to the lifting columns (2) with the screw (B) and tighten it with 4\*4 allen key (C).

### STEP3 Install the handset

**D** 5x5

3

2

1




9

D



Position the handset (3) as shown in the picture to align the three screw holes on the tabletop, then fix it with the screws (9)and tighten them with 5\*5 allen key (D).

## STEP4




Connect all cables to the adaptor

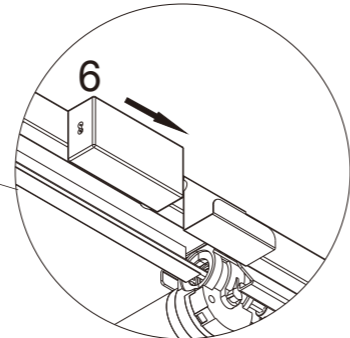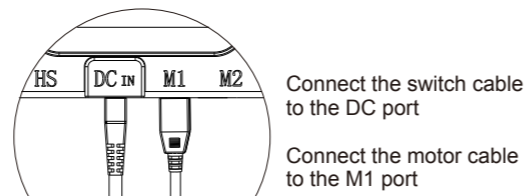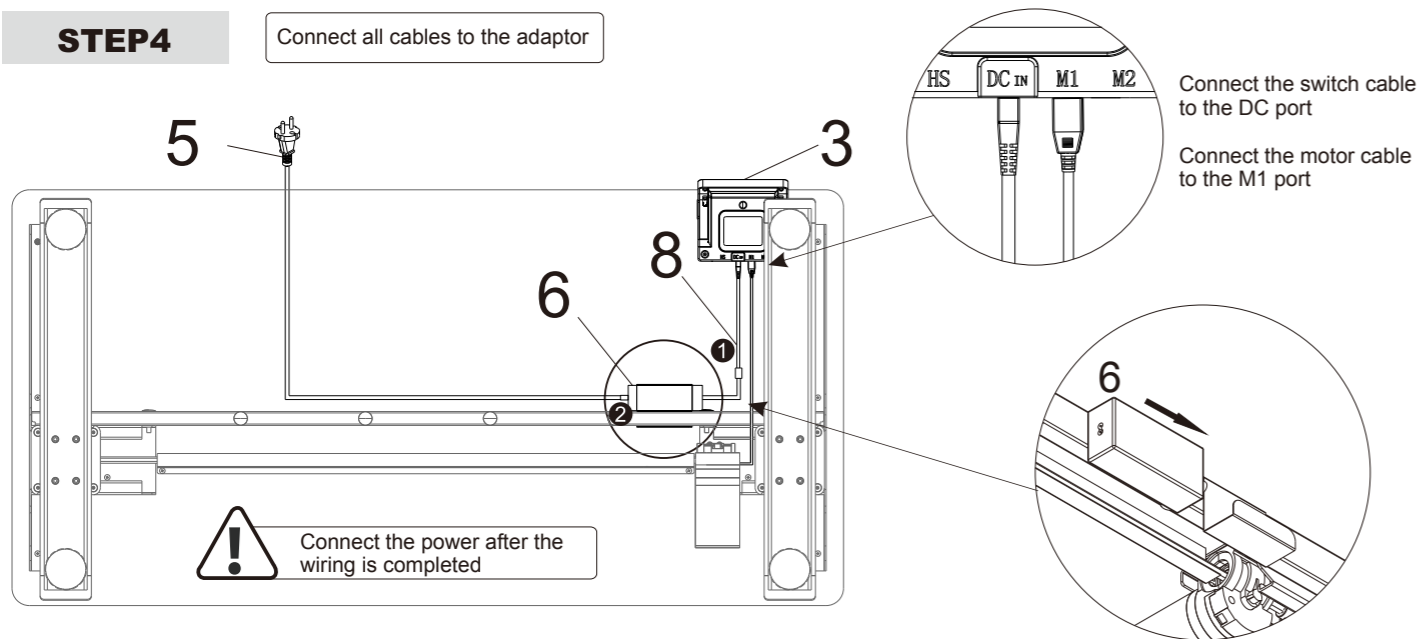

Insert the adaptor(6) to the bracket of the tabletop

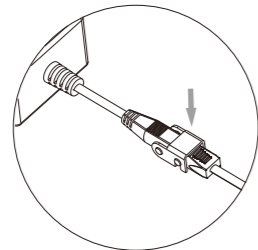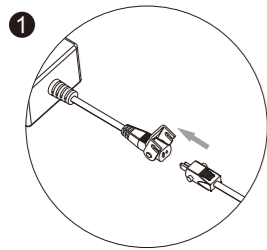

Fix the cables to the tabletop with cable management(7) to keep desk clean.

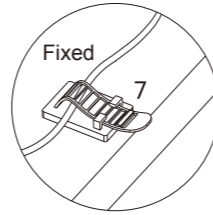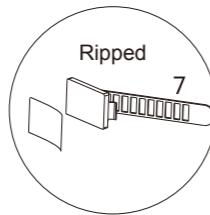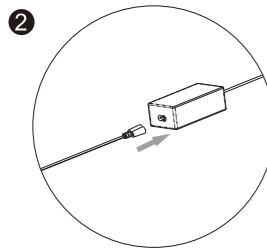

## Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	1. Check if all the cables be connected well 2. Contact your supplier or dealer
No response while pressing up arrow/ down arrow after connected with a power supply	1. Check if all the cables be connected well 2. Contact your supplier or dealer
Rising in a low speed	1. Check if overloaded, max loading: 50kg; 2. Contact your supplier or dealer
The motor not move as instructed	1. Contact your supplier or dealer
Go down but not go up	1. Reposition 2. Contact your supplier or dealer
Downward sliding	1. Check if overloaded, max loading: 50kg; 2. Contact your supplier or dealer
Frequently Reposition	1. Check if overloaded, max loading: 50kg; 2. Contact your supplier or dealer
Overwork (Duty cycle: Max 2min on/18min OFF)	1. Restart after suspend for 18mins while connecting with power; 2. Contact your supplier or dealer;
Not enough up&down height	1. Perform a reset operation; 2. Contact your supplier or dealer.



## Attention

1. Power supply: AC100V-240V,50/60HZ
2. Service Environment: 0-40℃
3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
5. Check carefully to ensure correct and complete assembly before using.
6. Be familiar with all functions and program settings of the product before first use.
7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on manufacturers.
8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
11. Cleaning and user maintenance shall not be made by children without supervision.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
13. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
14. Keep the original package of the equipment if necessary in case of the future use in transportation.

## Waste disposal




This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

**A G I L**  
by Inover Home  
Tel. 02822 / 696 79 26  
E-Mail. [info@inoverhome.com](mailto:info@inoverhome.com)  
Hindenburgallee 8 46446 Emmerich

# AGIL

## 1. Product Outline

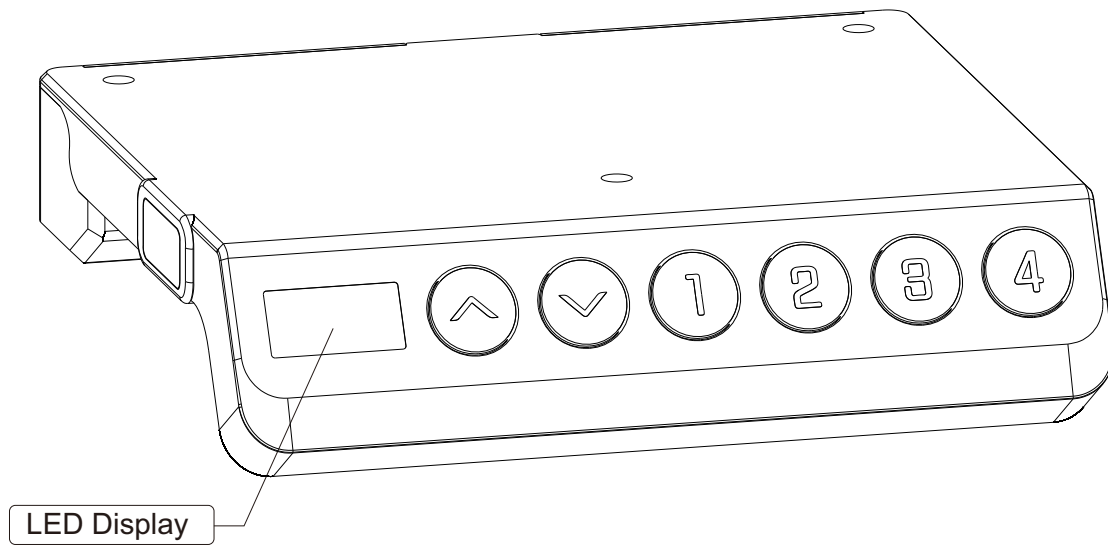

## 2. Product Specification

1. Bottom introduction: There are six buttons that "▲", "▼", "1", "2", "3", "4"

- (1) "▲" : Adjust the desk upwards
- (2) "▼" : Adjust the desk downwards
- (3) "1" : Position 1, first height position saved by the user
- (4) "2" : Position 2, second height position saved by the user
- (5) "3" : Position 3, third height position saved by the user
- (6) "4" : Position 4, fourth height position saved by the user

## 3. Operating Instructions

### ● Height Adjustable Function:

1. Press the "▲" button, the standing desk will rise up, press and hold to continue to rise, when it rises to the highest point, the digital tube displays top
2. Press the "▼" button, the standing desk will drop down, long press and continue to drop down to the lowest point, the digital tube displays bot

### ● Height Memory Function:

1. When the desktop is in a static state, press and hold the button "1" for three seconds, the buzzer will produce an audible prompt, and the display shows "S-1", which means the save is successful, and then run the desktop to any height, click the button "1" Can run to the original memory height
2. Buttons "2", "3" and "4" all have the same memory height function as button "1", just repeat the above steps

### ● Reminder Function:

1. When the height of the device is incorrect or an error code appears, the device needs to be reset and corrected. At the same time, press and hold the "3" and "4" keys for three seconds to enter this function.
2. After entering the reset function, the display shows "RST". At this time, press and hold the "▼" button to reset the device. When the desktop drops to the lowest height, it starts to rebound and move upwards until it displays "bot", which means the reset is complete.

### ● 29V DC power supply function:

1. When the standing desk is not in the reset state, after 1 second from running to stopping, the 29V DC power supply function will be turned on, and the 2pin at the back of the control box will output a DC 29V voltage.


### ● Anti-collision sensitivity adjustment - optional features:

1. Simultaneously press the "▲" button and "▼" button for three seconds to switch the sensitivity, one operation to switch one gear, divided into 4 gears, A-0, A-1, A-2, A-3
2. The display shows "A-0" to close the anti-collision function; the display shows "A-3" high sensitivity; the display shows "A-2" Medium sensitivity; the display shows "A-1" Low sensitivity. (Factory default A-2)
3. When the desk rises or falls, it will rebound immediately when encountering obstacles, which plays a protective role.

### ● Code processing:

1. Reset function definition, the LED display shows "RST" or "rst", at this time, press and hold the "▼" button to start the device reset, when the desktop drops to the lowest height, it starts to rebound and run upwards until it displays "bot", that is, the reset is complete.
2. If "E01" or "E02" appears, please let the table rest for more than 18 minutes before it can be used normally.
3. If other codes appear and long press the "▼" button does not respond, please confirm that the connection line is not damaged and the connection is normal, and the power is cut for more than 10 seconds, and the power is turned on again, the display "RST" or "rst", then long press "▼" Button to reset.
4. If you perform the above operations, the desk still does not operate normally, please contact customer service.

### Waste disposal

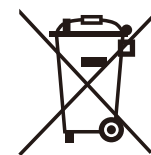

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.